


## 9. 壓腳機構(一)

### PRESSER FOOT COMPONENTS

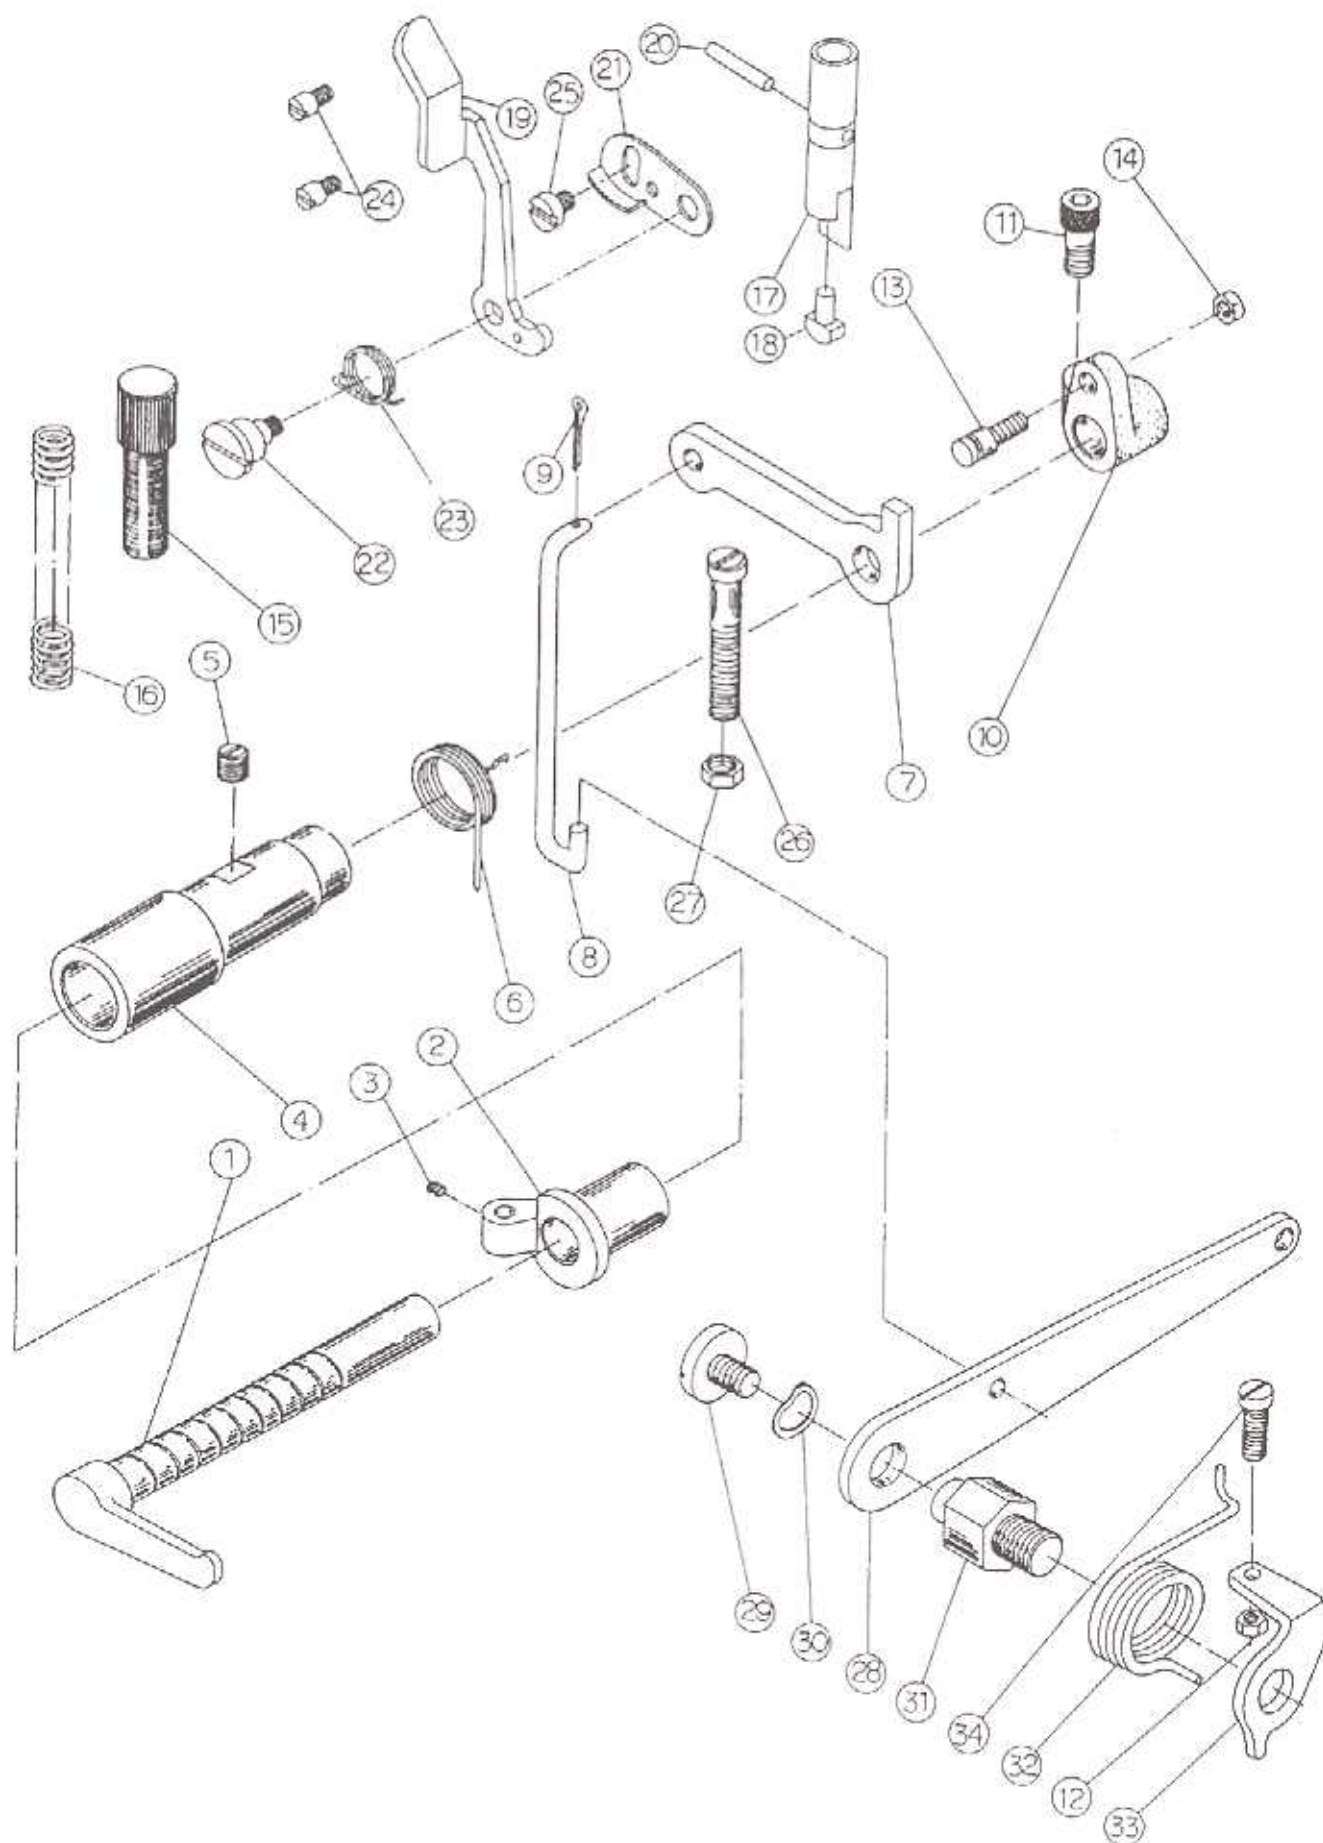

## 9.壓腳機構(一)

## PRESSER FOOT COMPONENTS

序號 Ref.No.	物料編號 Parts.No.	名稱 Description	單位用量 Amt. Req
01	2100000901	軸 Presser foot shaft	1
02	2100000902	軸襯 Bushing	1
03	8MN04280400E	螺絲 Screw	1
04	2100000904	軸襯 Bushing	1
05	8SG60280700A	螺絲 Screw	1
06	2100000906	彈簧 Spring	1
07	2100000907	曲柄 Lifting arm	1
08	2100000908	掛鉤 Lifting hook	1
09	90SL0220	開口銷 Split pin	1
10	2100000910	曲柄 Presser foot Shaft Thrust arm	1
11	8MM06301210A	螺絲 Screw	1
12	8SA44400307A	螺帽 Nut	1
13	8SB44401705J	螺絲 Screw	1
14	8SA44400307A	螺帽 Nut	1
15	2110000915	螺絲 Presser Spring regulator	1
16	2100000916	彈簧 Spring	1
17	2100000917	壓桿 Presser bar	1
18	2100000918	壓子 Plunger	1
19	2110000919	板手 Presser foot lifting lever	1
20	90SP0318	彈簧銷 Spring Pin	1
21	2110000921	墊片 Base	1
22	2100000922	螺絲 Lifting lever screw	1
23	2100000923	彈簧 Spring	1
24	8SB36400505M	螺絲 Screw	2
25	8SC44400508D	螺絲 Screw	1
26	8SK60283608G	螺絲 Screw	1
27	8SA60280309A	螺帽 Nut	1
28	2100000928	連桿 Lifting lever	1
29	8SC64240916C	螺絲 Screw	1
30	90WW105	波型墊圈 Waved washer	1
31	2100000931	螺絲 Lifting lever screw	1
32	2100000932	彈簧 Spring	1
33	2100000933	止動片 Stopper	1
34	8SK44401307A	螺絲 Screw	1